



Dear customer,

Thank you for your purchase of the **Copper Extractor** wire stripping unit! It has been manufactured right here in the USA and we are sure that you will be pleased with your purchase. If at any time you have questions about our products, contact us at: [sales@thecopperextractor.com](mailto:sales@thecopperextractor.com). Please visit our website, [www.thecopperextractor.com](http://www.thecopperextractor.com), to see all of our products. Below are a few guidelines to follow while operating your unit.

- Recommended spindle speed: 350-400 RPM
- Less than 300 RPM for 10 AWG or 6.0 mm
- The unit must be properly secured to prevent it from rotating when using a drill or drill press, but not fastened directly to the drill press table.
- The drive shaft must be rotated clockwise
- Keep inside of unit clear of debris
- Keep gears lightly greased
- Use only on copper wire

Thanks again for your purchase!